



INSTRUCTIONS FOR USE OF THE DISHWASHER

1. Switch on at wall
2. Turn left hand knob to “wash”
3. Wait half an hour or so for green light
4. Insert **ONE** loaded basket
(grey for cups, orange for plates, yellow for cutlery)
5. When green light comes on, set timer (right-hand knob) to suit soiling. (Minimum 60s, maximum 240s).
Machine will start.
6. When emptied, refill baskets as required
7. At end of use, remove basket & take out grey plug leaving filter in place
8. Close door, turn left hand knob to drain and right-hand knob to 240s
9. When cycle finished, turn left hand knob to off
10. Open door. Replace grey plug
11. Leave door open to air
12. Switch off at wall