

Using the Sound System: Connecting an iPod or similar

Locate the connection panel on the left side of the stage:



Using a thin (3.5mm) jack cable, connect the iPod to the connection panel:



Use only the centre socket on the connection panel. Do NOT use the left hand socket.

(N.B. This socket goes directly to the amplifier. It does NOT use the box that is behind the curtain on the rear of the connection panel.)

Amplifier

The amplifier is back stage on the right hand side of the hall.



Check the switches on the wall behind the amplifier.




- The “Control” switch MUST be in the UP position (as shown).
- The rotary switch MUST be in the Vertical position (as shown).

Switch on the amplifier and set both dials to 7.



Check that the Mixer (on top of the amplifier)

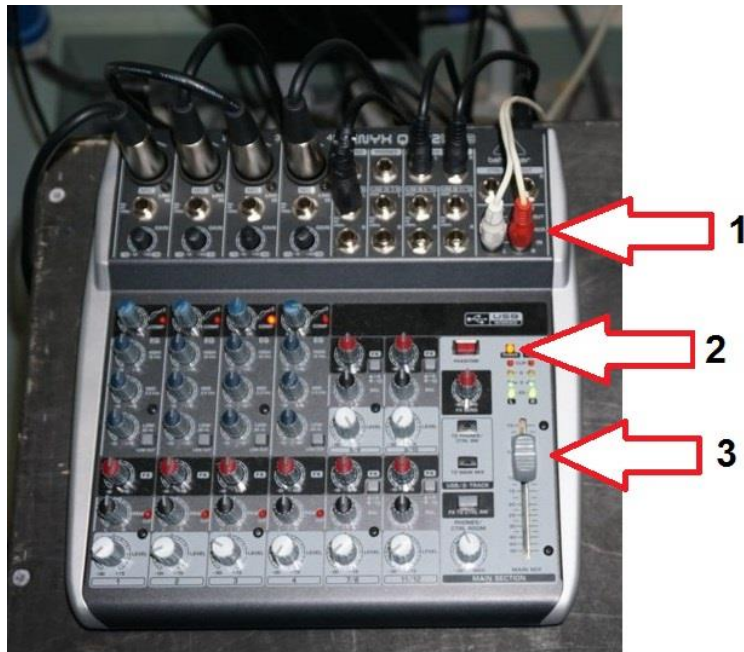

1. Check that the white cables (with red and white plugs) is connected to the mixer (as shown).
2. The mixer should be powered on (Yellow light lit).
3. Move the slider about two thirds of the way up.

Volume can be adjusted by the slider control. If you are using microphones and other sound sources in addition to the iPod (for example, in order to introduce your music) then adjust this control first.