

DISHWASHER OPERATING INSTRUCTIONS

- Turn on at wall.
- With door closed, turn left hand knob to “wash”.
- Wait approx. 30 minutes for green light.
- Insert **ONE** loaded basket: Grey for cups and glasses / Orange for plates and dishes / Yellow for cutlery.
- When green light comes on, set timer to suit soiling (min 60s, max 240s). Machine will start.
- When emptied, refill baskets as required.
- At end of use, remove basket and take out grey plug, leaving filter in place.



- Close door, turn left hand knob to “drain”, turn right hand knob to 240s.
- When cycle finishes, turn left hand knob to “off”.
- Open door and replace grey plug. Wipe the base of the dishwasher clean as necessary.
- Leave door open to air.
- Turn off at wall.