

Connecting a computer or other device via the projector

The master switch for the projector is located at the rear of the stage in the corner to the right. *(NB This also acts as the master switch for the controls for the drop down screen, located on the rear face of the stage wall on the left side of the stage.)*

Turn this master switch on.



The projector is located above the stage. Once the master switch has been turned on the projector will go into standby mode, with a green light flashing slowly on the underside.



Then locate the connection panel on the left side of the stage:



Using an HDMI cable, connect the computer or other device to the connection panel:




The projector will recognise that a device has been connected and will wake up from standby mode and start operation. The green light on the underside of the projector will stop flashing and stay on.

Using the Sound system in conjunction with the projector

The projector has its own small integrated speaker, but if a greater sound volume is required then the hall's main audio system can also be used to transmit sound from the projector.

The audio cabinet is back stage on the right hand side of the hall.

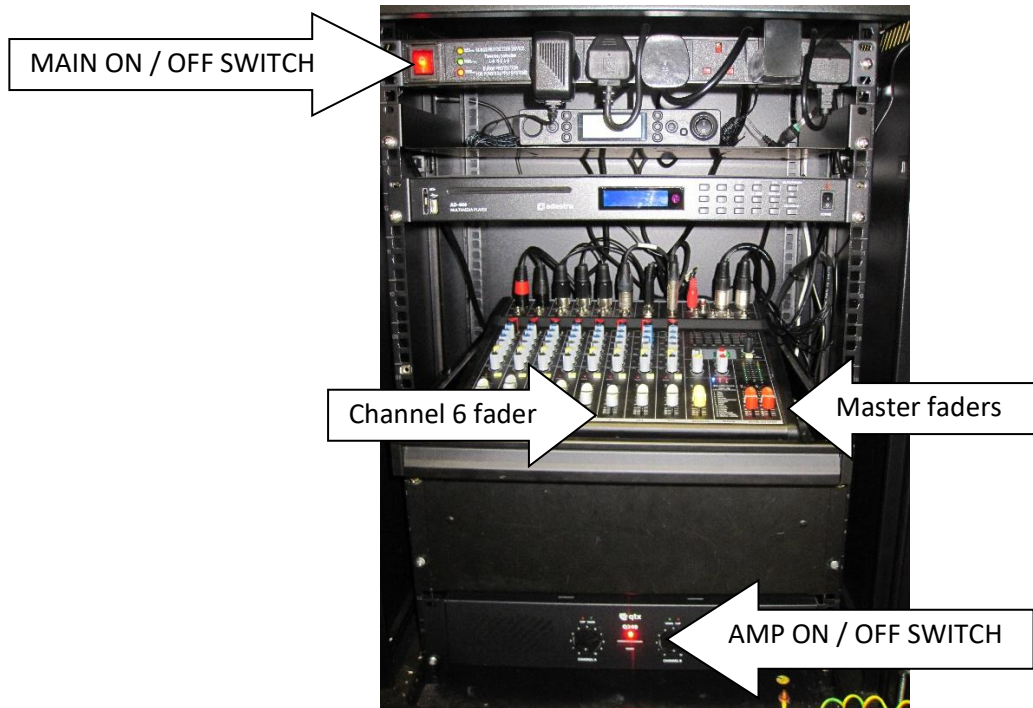

- Switch on the system using the main red switch in the top left.
- Switch on the amplifier (at the bottom) if isn't already on.
- The audio input from the projector goes through channel 6 on the mixer. Control the volume as necessary using the channel fader and / or master faders.
- If you are using microphones and other sound sources in addition to your computer (for example, in order to introduce your video) then adjust the other sources first and then use the faders to adjust the video volume.

NOTES

“Hum” may be experienced if the computer is run from the mains. This can be eliminated by disconnecting the mains lead and running the computer from its batteries.

AFTER USE

1. Disconnect the computer or device.
2. Turn off the projector master switch.
3. Turn off both the amplifier and the main red switch in the sound system cabinet.
4. Close the curtains at the rear of the stage.